



**Counterclockwise is open: Mast moving with the hand.
Clockwise is open: Mast cannot be moved by hand.**